

4502, 4502X, 4802, 4802X

Widespread Lavatory Faucet Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

Operating Specifications:

Operating Specifications:

Recommended Supply Pressure: 20 to 70 psi *†

Maximum Flow Rate: 1.2 gpm

- * Operating pressures between hot and cold supplies should vary no more than 30 psi.
- † If water pressure exceeds 70 psi, install a Pressure-Reducing Valve (PRV).

la


INSTALLING SPOUT (3-Way Tee)


- Attach RING (2) onto BASE (3) and slide onto spout SHANK (1a)
- Insert spout SHANK (Ia) though sink/deck hole


NOTE: Sink / deck recommended hole size is Ø1-3/8"

- From underside, place SLOTTED WASHER (4) onto spout SHANK (1a) and tighten SPOUT (1) into place with NUT (5)
- Insert RUBBER WASHER (6) into TEE (7) and attach to spout SHANK (1a)


IMPORTANT: TEE (7) should be tightened to create watertight seal and positioned to allow ease of attachment of valve hoses

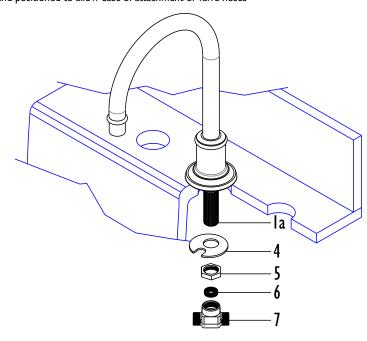

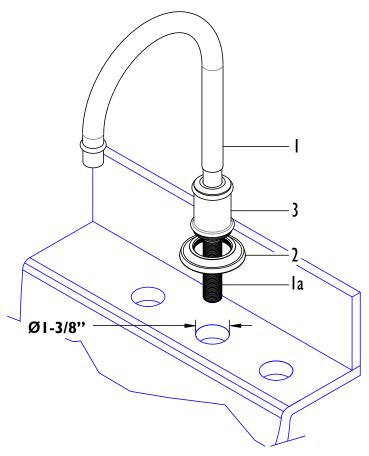

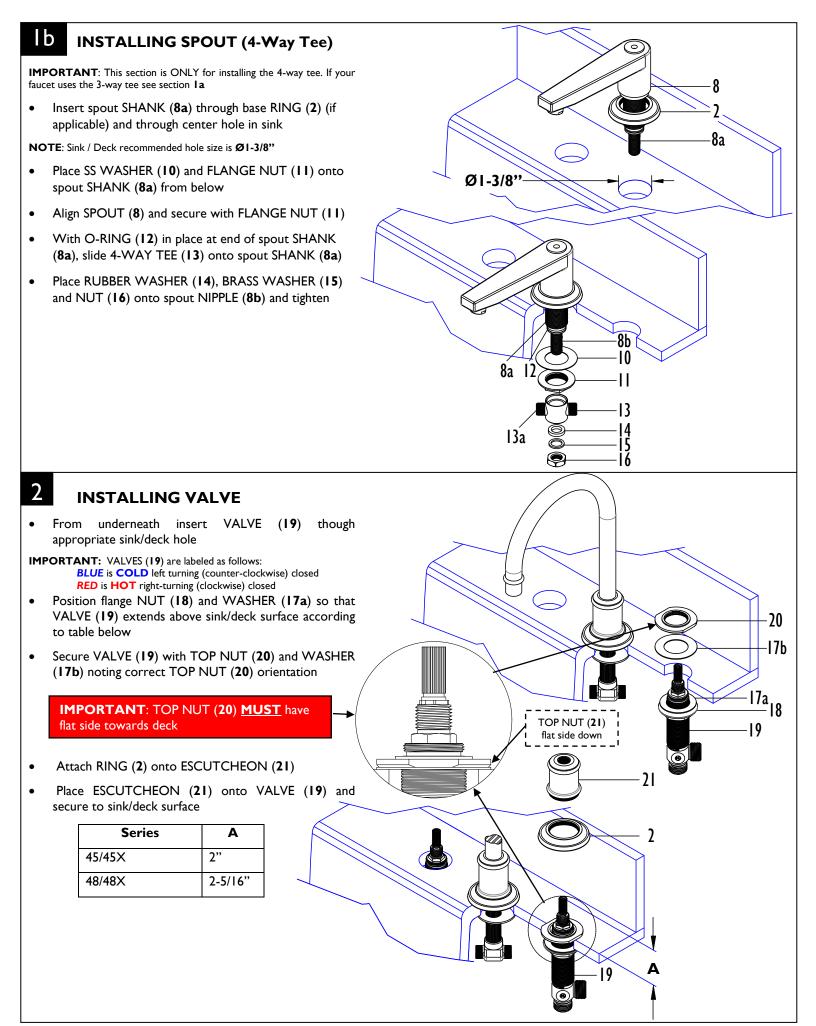

4802_ii_200824 Pg 2

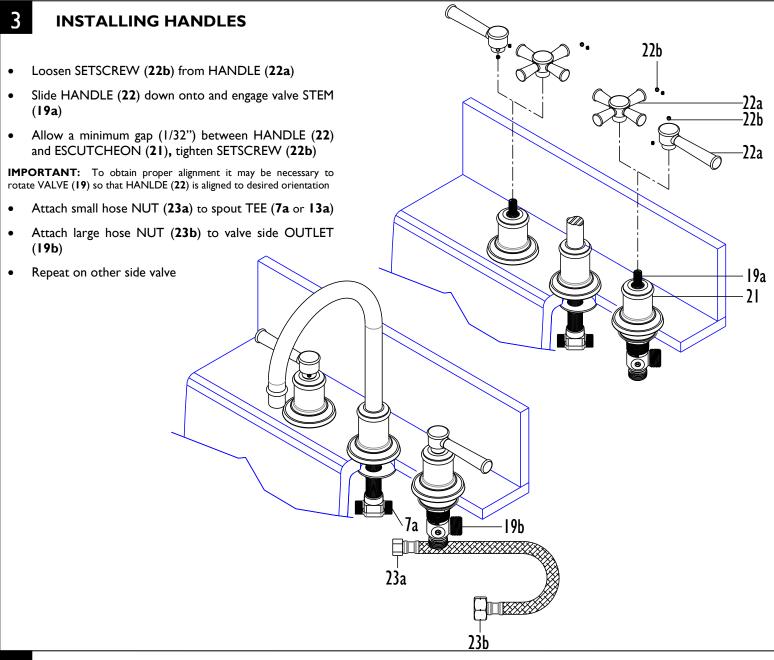

INSTALLING SUPPLY LINES

IMPORTANT: Prior to attachment, flush supply lines to remove debris that may cause damage or malfunction to valve cartridge.

The following are two types of supply lines (not included) that may be installed to the valve bodies:


Ballnose riser for exposed application

 Install BALLNOSE RISER (24a) using valve NUT (19c) to secure riser to valve INLET (19b)

-OR-

Flexible riser for non-exposed application

 Discard valve NUT (19c) & install FLEX RISER (24b) to valve INLET (19b)

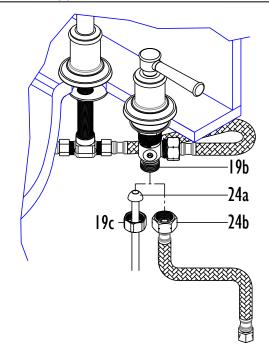

4802_ii_200824 Pg 3

6

INSTALLING DRAIN (Touch Style)

• Slide foam WASHER (25) under flange of BODY (26)

- OR -

Apply thin film of silicone sealant (or equivalent) to underside of flange on BODY (26)

IMPORTANT: Do not use petroleum-based sealant as this will void finish warranty

- Insert BODY (26) down through sink drain hole
- From underside, slide MACH-WASHER (27) and FRICTION-WASHER (27a) up onto BODY (26)
- Secure BODY (26) into place with flange NUT (28)
- Apply Teflon tape (30) (not supplied) to threaded portion of TAILPIECE (29) & tighten onto BODY (26)

-OR-

INSTALLING DRAIN (Lift Rod Style)


 Remove COLLAR (31) from assembly & apply silicone caulk (or equivalent) to underside of COLLAR (31)

CAUTION: Do not use any oil-base sealant that may damage finish

- Insert BODY (32) from below & attach COLLAR (31)
- Align BALL ROD HOLE (32a) to rear & secure FLANGE NUT (33), FRICTION WASHER (34) & MACK WASHER (35) to sink drain hole
- Remove TAILPIECE (36) from BODY (32), apply thread sealant to threads & tighten into BODY (32)
- Insert STOPPER (37) into COLLAR (31) and rotate off-set HOOK (37a) to front to accept BALL ROD (38)
- Remove spring CLIP (39) from BALL ROD (38)
- Place CONE WASHERS (40) on both sides of rod BALL (41) with NUT (42) to backside
- Insert BALL ROD (38) into BALL ROD HOLE (32a) and through off-set HOOK (37a)
- Tighten NUT (42), but allow BALL ROD (38) to freely move up and down
- Insert LIFT ROD (44) through hole in spout from above
- Place STRAP (43) onto LIFT ROD (44) and tighten THUMB-SCREW (45)
- Place one end of CLIP (39) onto BALL ROD (38), then STRAP (43), gently squeeze CLIP (39) and slide other end of CLIP (39) onto BALL ROD (38)
- Check proper operation of STOPPER (37) and adjust by sliding STRAP (43) on LIFT ROD (44) as necessary

Final connections

- Attach drain tailpiece to p-trap (not supplied)
- Turn on water supply valves and check for leak

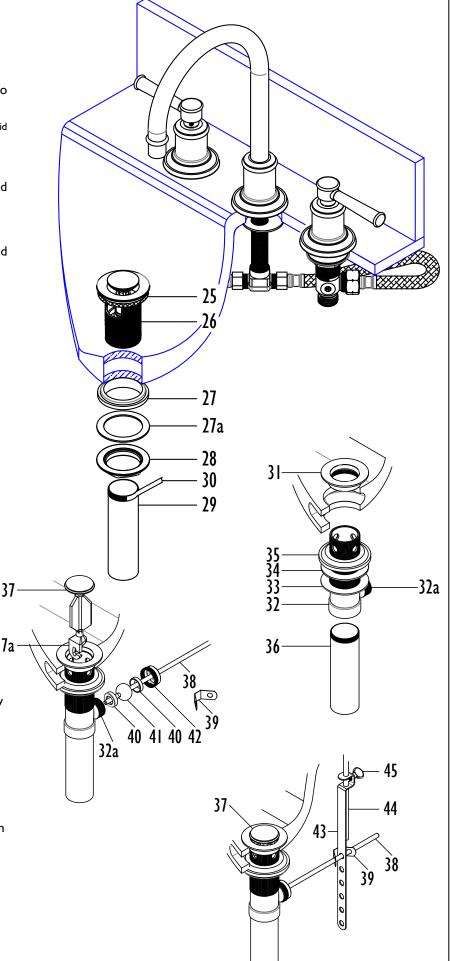

4802_ii_200824 Pg 5